

AQUALINE

WT-5505

Instruction Manual

Water Timer



Run Time: (Minutes)
1|3|5|10|15|20|30|60|90|120 min
Frequency: (Hours+ Once a Week)
1|2|3|4|6|8|12|24|48|72| Week

Installation:

1. Pull out the battery compartment and insert one new 9V alkaline battery. (Battery not included)
2. Hold the unit steady. Screw the collar onto the faucet/tap until it is tight; then tighten the locking collar. Turn on the faucet/tap. Do not use a wrench or pliers.

Manual ON/OFF function:

At any time you can use the manual ON/OFF function. While you revolve the knob to ON position, the valve will open continuously max. 30 minutes and turn off automatically in case not turn OFF. You can revolve the knob to OFF and then the valve will turn off immediately.

Particular warnings:

1. DO NOT use chemicals and liquid for human consumption
2. DO NOT leave the device exposed to low temperatures (snowing days)
3. DO NOT use the device indoors.
4. Always replace the battery before you leave for a long period
5. Never use the device without its suitable filter (filter washer included at water inlet end)
6. Check periodically the filter placed in the upper ring nut, and clean it.

Trouble – shooting guide:

1. If the water cannot come out, please check the following.
 - a. The faucet / tap should be turned ON.
 - b. Make sure your battery is in good condition.
 - c. Check if FREQUENCY and RUN TIME is the same as the setting record.
 - d. FREQUENCY time must be "LONGER" than RUN TIME.
 - e. Fast knob turning could cause some miss of program reading.
2. If the timer is still not working, please contact the store for checking and assistance.

Low battery indicator:

While the low battery indicator light remains on continuously, the valve will be shut off & locked automatically. Please replace new batteries for the timer.

Operation:

1. Turn the knob and set up the RUN TIME
2. Turn the FREQUENCY knob on RESET position. After the red light flash, set up the FREQUENCY TIME.
3. If no red light flashed; check the batteries and make sure they are installed correctly.
4. Record your setting, note the FREQUENCY and RUN TIME for future reference.
5. At any time you can use manual function. When turning the knob ON, valve will open 30 minutes and stop automatically. Or you can turn it to OFF manually.

But remember the knob must be turned back to STEP 3 as the original RUN TIME setting when finished manual watering.

For Example:

A. Every day watering 10 minutes at 6:00AM and 6:00PM:
At 6:00AM or 6:00PM, turn the knob of RUN TIME to 10 and the knob of FREQUENCY to RESET. Then, turn to 12. The watering program start 10 minutes, and after 12 hours, the water timer will automatically start to water 10 minutes. It works every day at 6:00AM and 6:00PM.



B. Every day watering 20 minutes at 7:00AM:
At 7:00AM, turn the knob of RUN TIME to 20 and the knob of FREQUENCY to RESET. Then, turn to 24. The watering program start 20 minutes, and after 24 hours, the water timer will automatically start to water 20 minutes. It works every day at 7:00AM



Time delay feature:

You can delay your watering start time, using the time delay feature (Figure B). During Reset process, when the red light flashes, press delayed button for hourly delay. Each press makes the green light on and maximum delay for 12 hours. *Example: To delay watering for 3 hours, depress the time delay button 3 times.*

Technical data:

1. Min. operation pressure: 0.5 bar
2. Max. operation pressure: 12 bar
3. Max. water temperature: 40°C (104°F)